


Solid Headboard Assembly Instructions

Front View



Back View

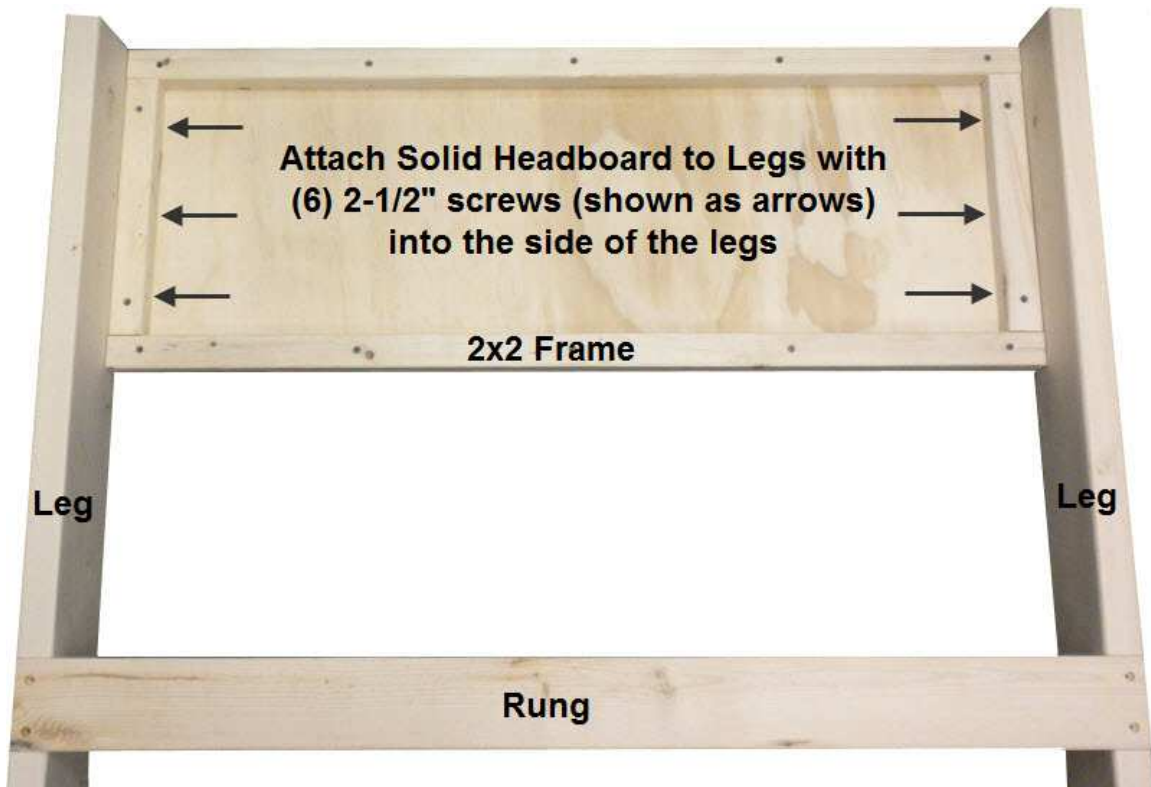

The headboard comes with a 2x2 frame already attached to the plywood front. The headboard may be attached anywhere on the legs and is typically placed above the top of the mattress. It may be attached either at the front edge, middle or back of the leg. Attach the headboard to the legs with (6) 2½" screws (shown as arrows in the above diagram) into the side of the legs, then attach the rung(s) that are behind or near the headboard. If you previously installed the rung(s) behind the headboard and if the headboard is a too tight or too loose a fit, you may remove (2) screws from one end of the rung(s), attach the headboard and then reattach the rung(s).