

SP - Solid Platform Assembly Instructions

2/5/20

The Solid Platform (SP) are multiple 1/8" MDF Sheets that are attached to top of the bed slats. First install the bed slats following the normal assembly instructions. When laying out the SP sheets on top of the bed slats position the slats so that they are underneath where two sheets are joined together, see diagram below. Starting at the opposite end from the entrance, lay out all the sheets based on the diagram below. Now attached the sheets to the bed slats with 1-1/4" nails into the corners and the center as per the diagram below. Make sure the nails are at least 3/4" away from any edge of the sheet.


Please Note: If you have the entrance opening at the (short) end of the bed and are using the **Safety Rail Brace** then one sheet will be 2" narrower to allow space for the Safety Rail Brace at the end of the bed. The **Safety Rail Brace** must be installed before installing the bed slats and the SP. If this is a bunk bed then the top bunk will use the narrower sheet and the bottom bunk will use the standard width sheet. Position all the sheets on both bunks first to make sure you have all the right pieces for each bunk.

If you ordered the **Angled Front Ladder with Ladder Hooks**, the SP sheets are cut 1/4" shorter to allow space for the Ladder Hooks to hang on the front rail. Position the sheets towards the back (long side) of the bed to give you 1/4" gap on the front (long side) to allow the Hooks to hang on the front rail.

If you ordered the **Bunk Bed with Open Ends and the Angled End Ladder with Ladder Hooks**, the last Solid Platform sheet will be about 1/4" short to allow the hooks to hang on the Header.

Items included:

Multiple 1/8" MDF sheets based on your bed size. Bag of 1-1/4" Nails

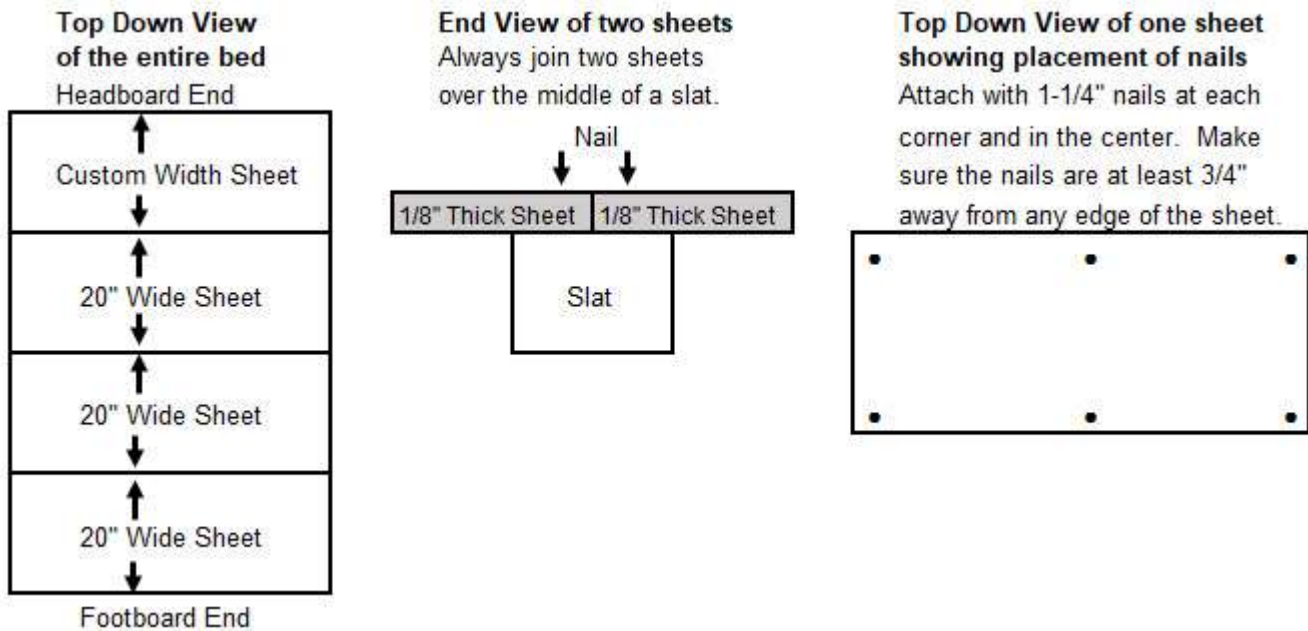

Picture of installed Solid Platform

