

Trundle Bed Assembly Instructions





2/22/22


Before attaching the pieces of your Trundle Bed together you need to make sure the unit is square. The easiest way to do this is to measure the diagonal from the top of one end to the bottom of the other end. When the lengths are different you need to move the rails left or right to get both values to be the same. Double check for square after each step.

- The Headers fit inside the Rails. Attach the 2x4 Headers to the 2x4 Rails with 2-1/2" screws into the pilot holes.
- If you ordered the Trundle Front Panel install it now following the instructions on Page 2.

Please Note: If you also ordered the Solid Platform (1/8" MDF sheets) that go on top of the bed slats, you need to first space the sheets out on the top of the bed slats to make sure a bed slat underneath is in-between where two sheets are joined together. Put a pencil mark on the rails where each sheet starts and ends as a guide. A bed slat must be installed underneath each long edge of the sheet. You can adjust the spacing between the slats to make sure it is underneath a sheet. Please read the Solid Platform Assembly Instructions first for more information.

- If you have (2) 2x6 slats they go at each end of the bed and attached with 2-1/2" screws.
- Attach the standard 2x3 slats to the rails with 2-1/2" screws spacing the slats 3" apart. If you have extra slats you may install them anywhere.

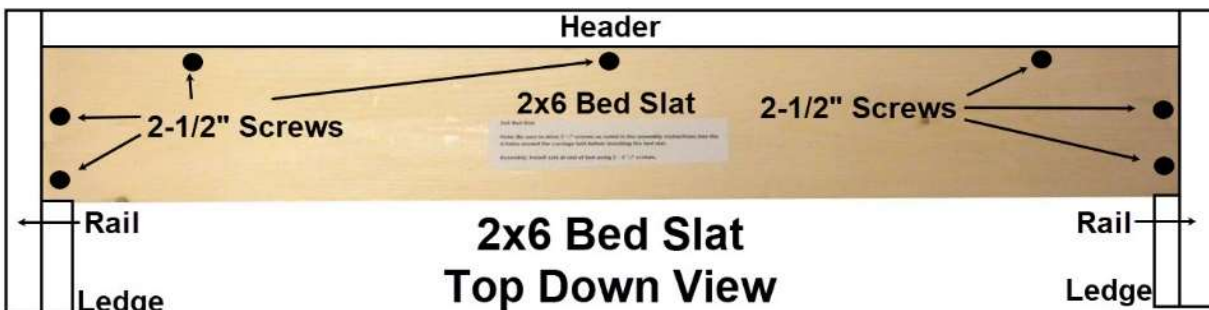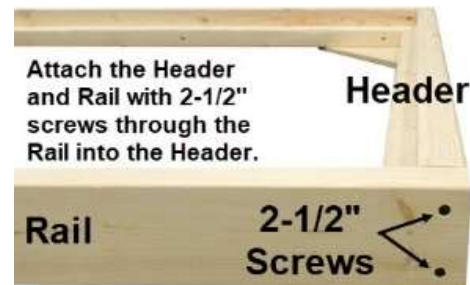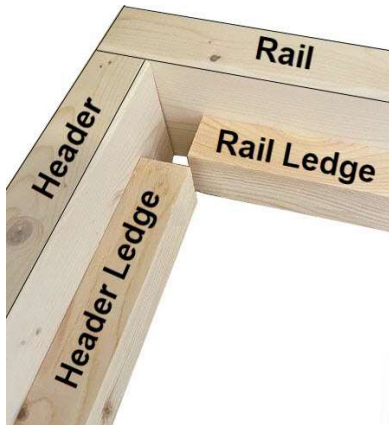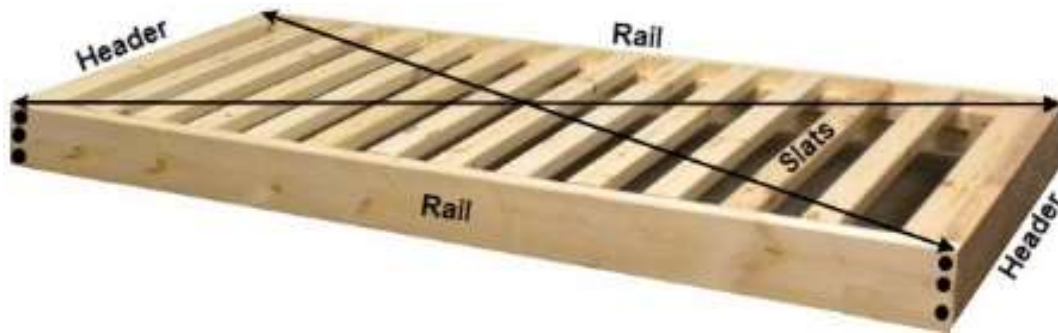

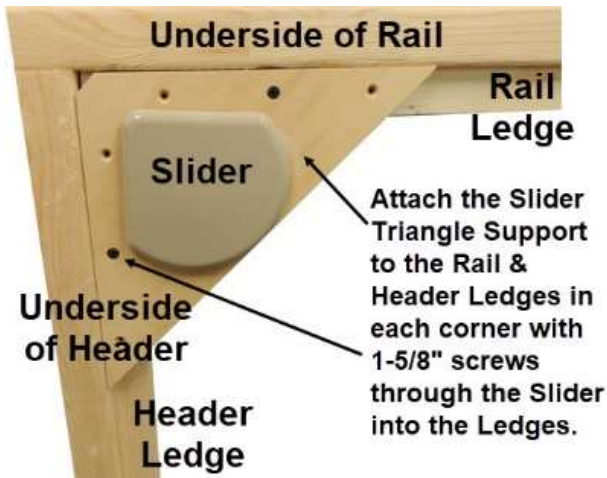

Attach the Triangle Support Slider underneath the frame with 1-5/8" screws into the four corners.

Trundle Front Panel Assembly Instructions (optional)

If you ordered the optional Trundle Front Panel it is installed before attaching the Trundle's Bed Slats.

It is attached through the front of the panel with (3) Carriage Bolts into the Trundle Front Rail. Then from inside the Front Rail use 2-1/2" screws into the pilot holes into the Front Panel.

Included are (2) Door Handles that needs to be attached to the front opanel. The handle is 6" long and has (4) screws. Install the handles about 12" – 24" on either side of the center carriage bolt at the same height as the carriage bolt.

