


Lower Bunk on the Floor Assembly Instructions


5/17/22

In some cases due to a lower ceiling or by customer request, the lower bunk Rails and/or Headers will be placed on the floor. They are attached to the inside of the Legs with 2-1/2" screws through the Rails and/or Header into the legs. We will provide you with a 1/8" drill bit for drilling any pilot holes as needed. Attach the Bed Slats to the Rails following the standard assembly instructions.


Follow these diagrams if you ordered the Standard Bed with Rungs at each end.

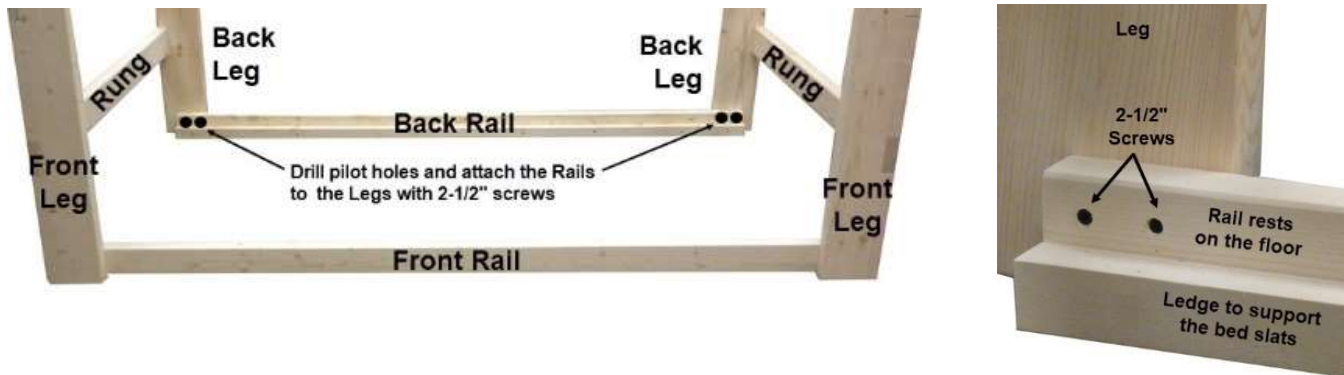

◀ Follow this diagram if you ordered the Open-Ends Bed with L-Shaped Legs.

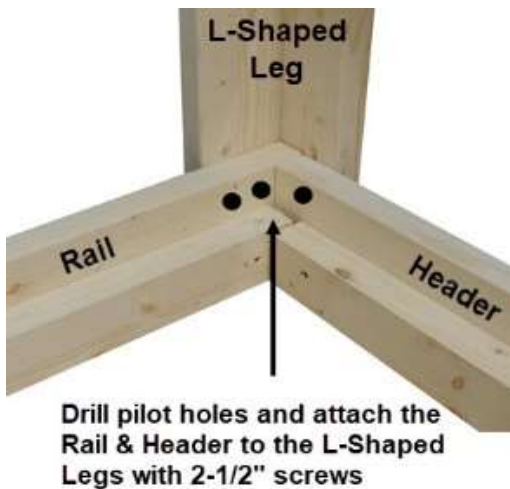

Installing the Bed Slats

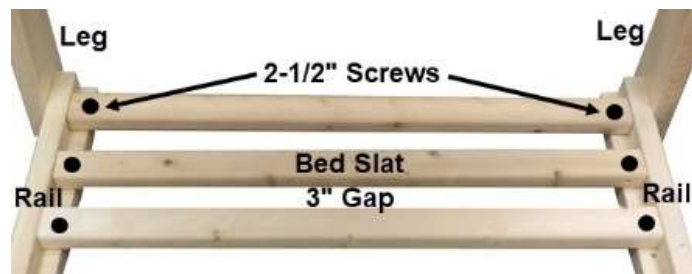

Custom 2x6 Bed Slats

Depending on the options you selected, you may receive (2) 5-1/2" wide bed slats that are installed at each end. Attach the bed slat to the header and front and back rail with 2-1/2" screws into the pilot holes. The remaining standard (2-1/2" wide) bed slats are then installed following the above instructions.

