



Hanging Front Ladder Assembly Instructions

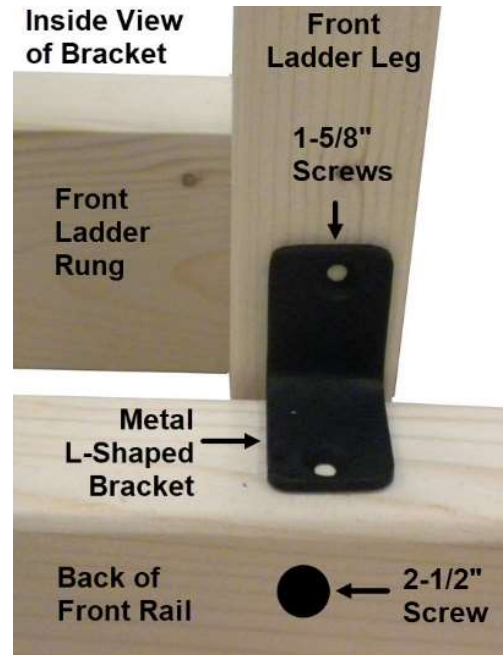

Hanging Ladder view from inside the bed

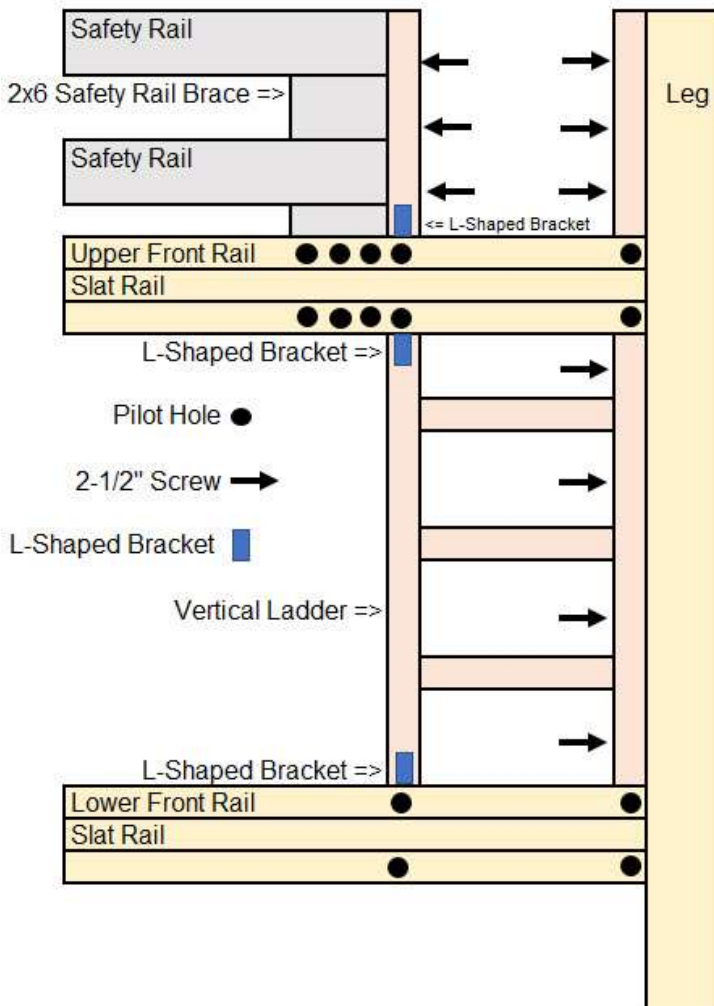

If you ordered a Bunk Bed with either a Trundle or Storage Drawers and the Vertical Front Ladder, the Ladder will hang on the Upper and Lower Front Rails. The Ladder may be installed at either end.

Basically the ladder is attached to the bed's leg post and to the upper and lower rails.

First assemble the Ladder separately following the standard Vertical Ladder Assembly Instructions.

Next attach the Ladder side to the Bed's Leg Post with 2-1/2" screws into the pilot holes (arrows in diagram). The number of pilot holes will vary based on the custom height of your bed. The bottom of the Ladder must be even with the bottom of the Lower Front Rail.

Next attach the other Ladder side to the Upper and Lower Front Rails from behind the Rail into the Ladder with 2-1/2" screws into the pilot holes. Now attach the 2x6 Safety Rail Brace to the Upper Front Rail with 2-1/2" screws from behind the rail. Attach the Ladder to the 2x6 Safety Rail Brace with 2-1/2" screws into the pilot holes.

Attach the metal L-Shaped Bracket to the Ladder and Upper and Lower Front Rail with 1-5/8" screws. The Upper Front Rail will have a bracket on top and underneath and the Lower Front Rail will have a bracket on top. Place the bracket a little off center to avoid hitting the 2-1/2" screw underneath.

Place felt on top of the bracket to protect the mattress and sheets from snagging on it.