

Solid Platform Assembly Instructions

The solid platform is attached to the bed slats. First install the bed slats following the normal assembly instructions. When laying out the solid platform sheets on top of the bed slats position the slats so that they are underneath where two pieces of the sheets are joined together, see diagram below.

Starting at the footboard end lay out all the pieces based on the diagram below. Now attached the solid platform sheets to the bed slats with 1-1/4" nails into the corners and the center as per the diagram below. Make sure the nails are at least 3/4" away from any edge of the sheet.


Please Note: If you have the entrance at the footboard end of the bed and are using the Safety Rail Brace then one sheet will be 2" narrower to allow space for the Safety Rail Brace. If this is a bunk bed then the top bunk will use the narrower sheet and the bottom bunk will use the standard width sheet.

If you ordered the Angled Front Ladder and Ladder Hooks, the Solid Platform sheets are 1/4" shorter to allow space for the Ladder Hooks to slide over the front rail. Position the sheets towards the back of the bed to give you 1/4" gap on the front to allow the Ladder Hooks to slide in.


Items included:

(4) or (5 for 84" mattress length) Pieces of MDF Sheets cut as below

(1) Bag of 1-1/4" Nails

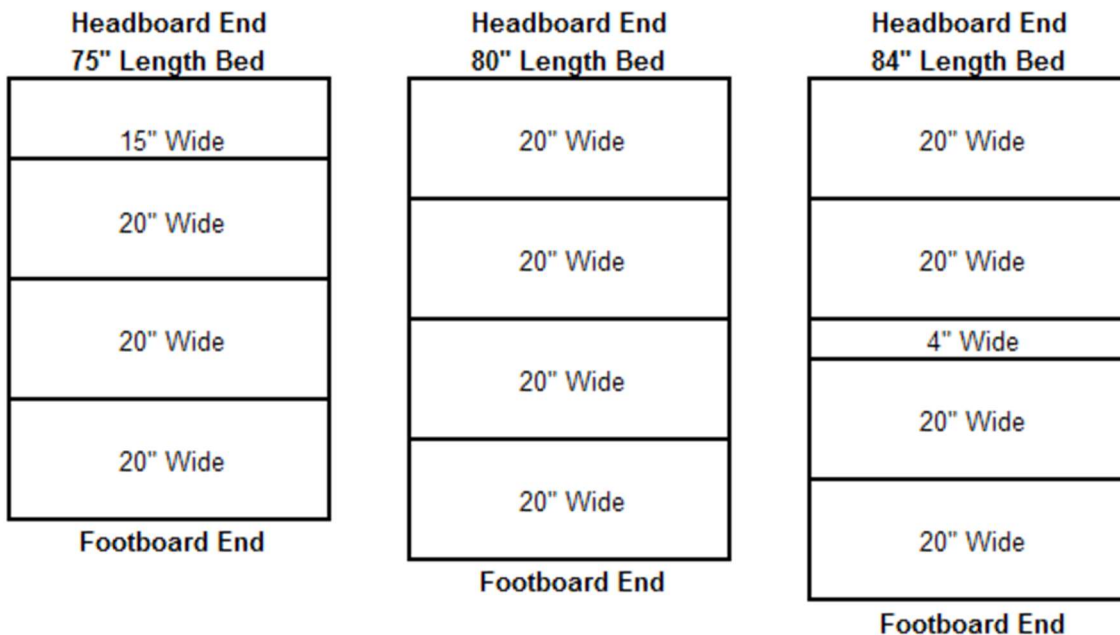

Always join two pieces over the middle of a slat.

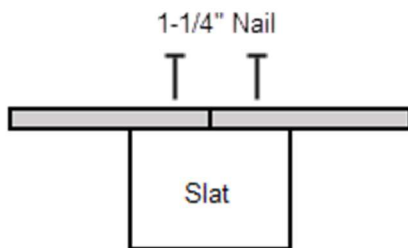

Attach with 1-1/4" nails at each corner and in the center. Make sure the nails are at least 3/4" away from any edge of the sheet.

