

# Bench & Table Assembly Instructions

5/4/21




The Bench may be installed at either end.

## Bench Screws (per bench):


- \_\_ (30) 2-1/2" Screws
- \_\_ (10) 1-5/8" screws

## Table Screws (per table):

- \_\_ (20) 1-1/4" Screws

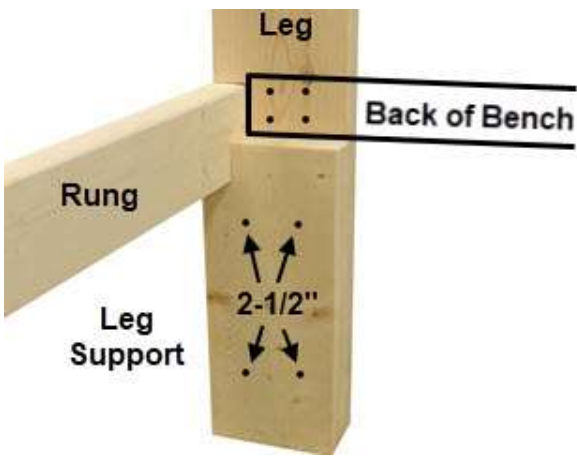

**Attach the Leg Supports** to the inside bottom of the legs with 2-1/2" screws into the pilot holes. The bench will rest on top of these supports.

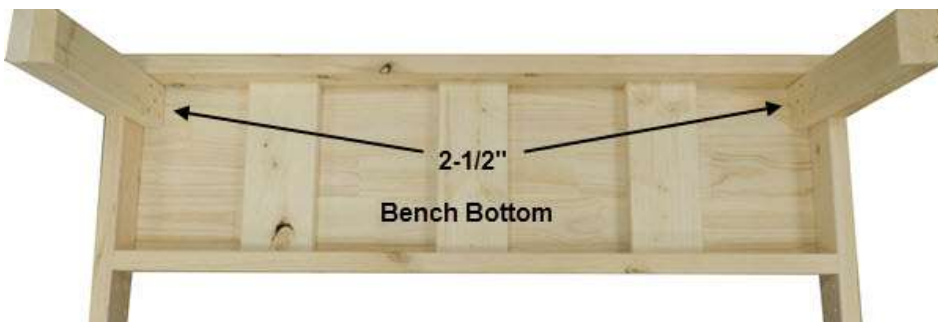


The **Bench Seat** comes with the frame and top attached. Place the bench face down on the floor and attach the legs to the frame with 2-1/2" screws into the pilot holes. The **Bench Seat** rests on the leg supports. Attach the Bench Seat to the legs with 2-1/2" screws into the pilot holes.


## Attach the Seat Back

Depending on your Loft Bed configuration, we have two types of Seat Backs. If your Seat Back **does not have** a frame on the back, you then attach the Seat Back from the front directly to the L-Shaped Legs with 1-5/8" screws at any height.

If your Seat Back **does have** a frame then attach it from the back following the diagram below.

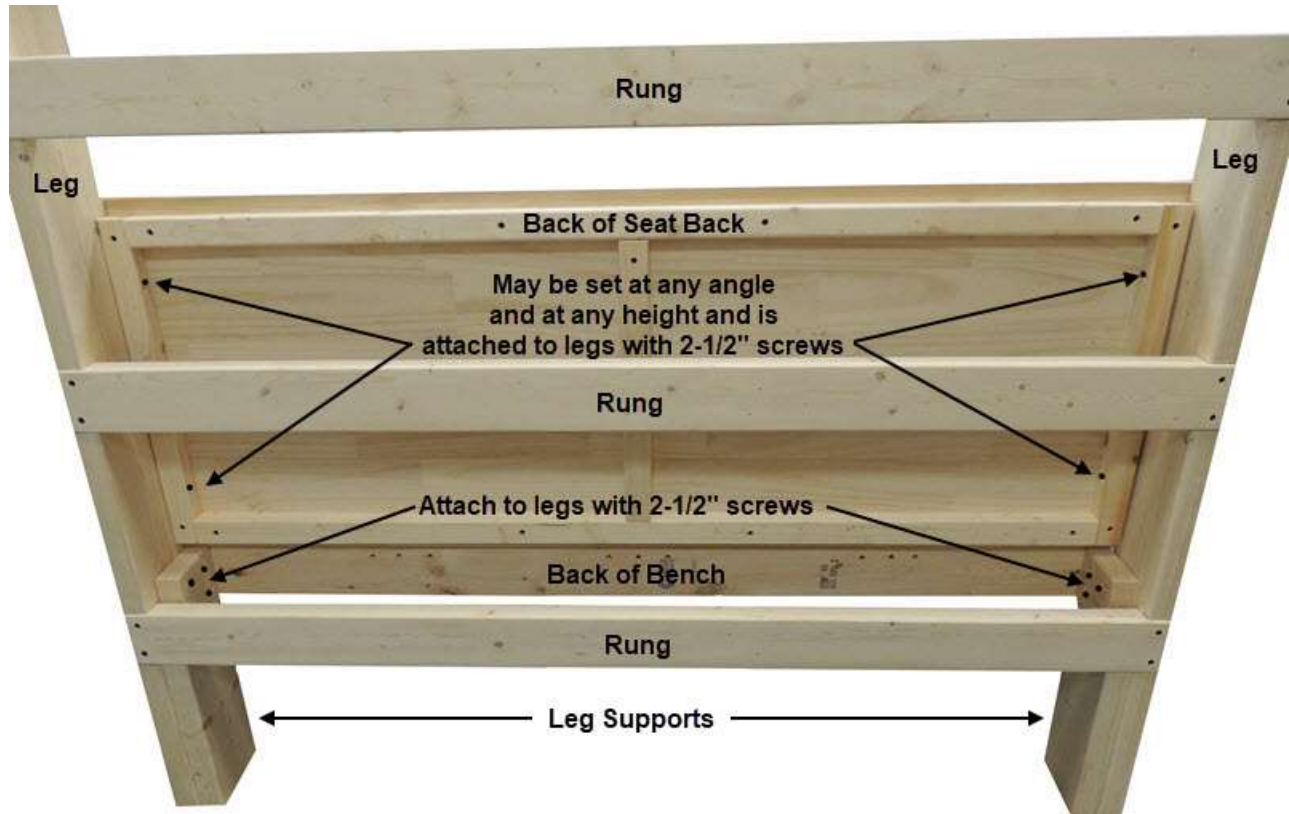

## Table Assembly

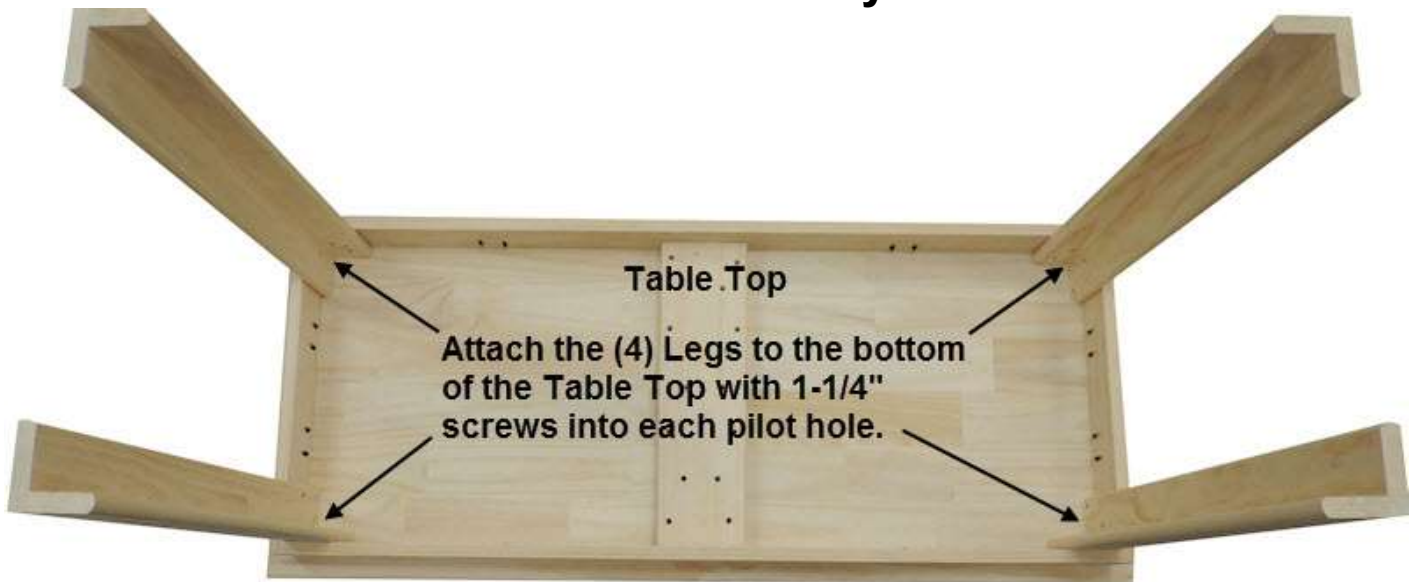

# Convertible Bench Bed


The Convertible Bench Bed has a table that is attached to a **Center Vertical Ladder** with Hooks on the front and resting on the 2x4 on the back. The Table may be placed at the standard table height (second rung) or placed lower (first rung) for a bottom sleeping surface. The beds shown below have optional shelving and grab handles.

**Table in upper position**

**Table in lower position**



First assemble the Vertical Front Ladder following the normal assembly instructions. Next attach the 2x4x15" Table Supports following the diagram below. This view is from inside the bed.

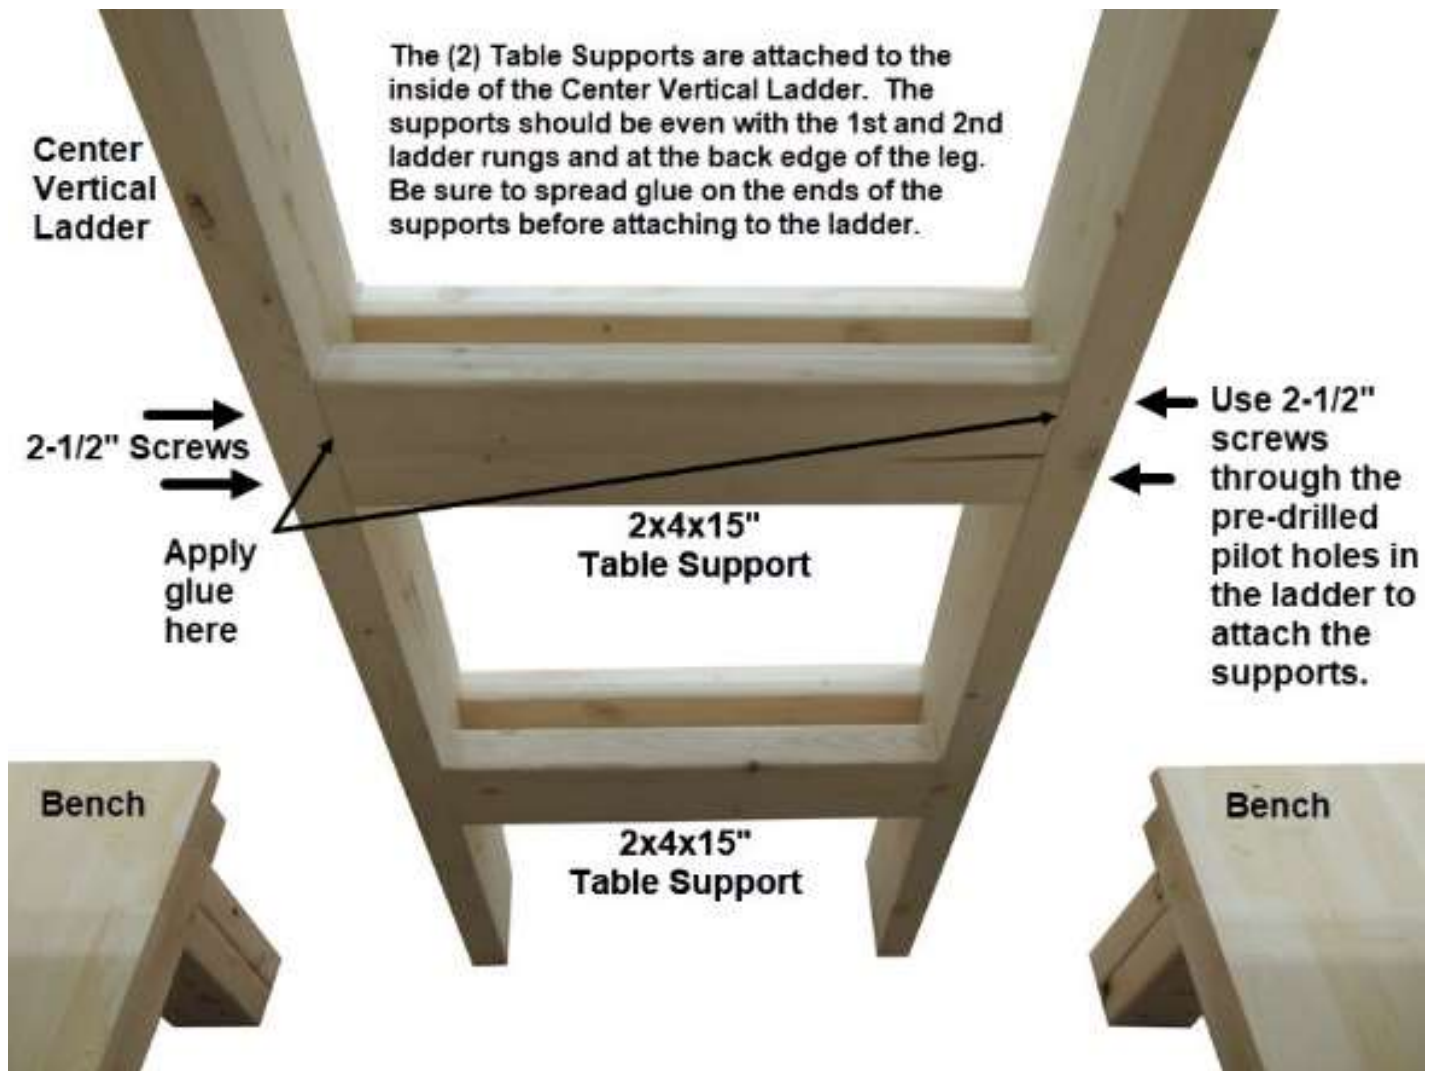

**Now attach the Center Vertical Ladder using 2-1/2" screws.** Position the 2x6 Safety Rail Braces next to the Ladder and bottom of the Front Rail and attach using the Carriage Bolts. Position the Ladder in place between the braces and attach to the Front Rail from behind the rail. Once everything is lined up and straight (vertical) attach the Safety Rail Brace with screws from behind the rail. Now attach the final screws through the ladder into the Braces.

### Center Ladder view from inside the bed

