

King Size Bed with Center Leg Assembly Instructions

4/21/23

An example of a king with the short desk, short shelf, angled front ladder and solid headboard with (2) shelves.



Example of the short desk and short shelf.




Example of the Mattress / Pillow Stop with (1) Shelf.



Example of the Mattress / Pillow Stop with (2) Shelves.



Example of a King with a Top Shelf and Headboard Shelf

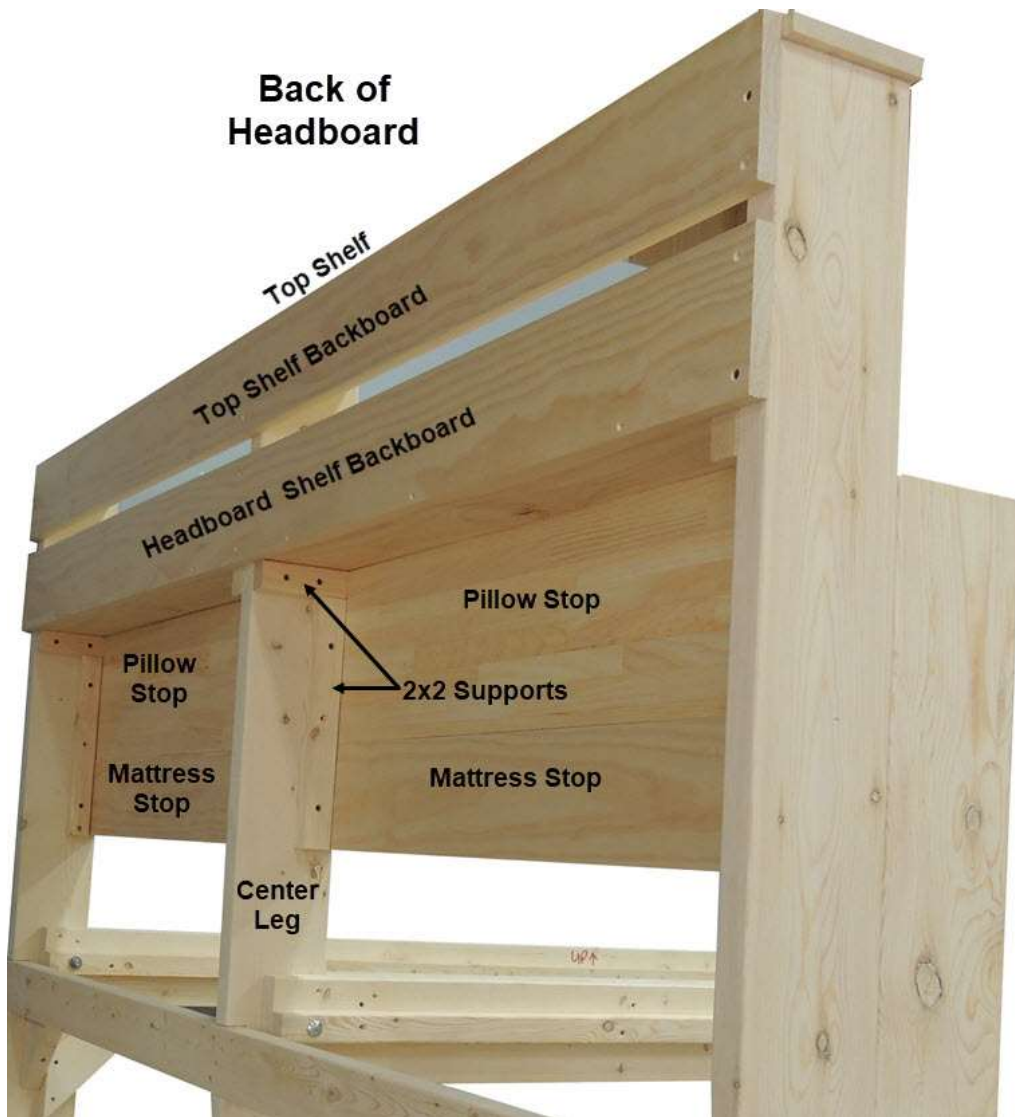

This set of instructions is for a King Size or larger custom bed built with a center leg. You will initially build the bed following the standard assembly instructions. Then follow this set of instructions for the center leg assembly.

To make sure the center leg is placed in the exact center we will provide you with two Center Leg Spacer bars. When installing the Rungs into the Leg Notches, install the two outside legs first to the end of the rungs following the standard assembly instructions. Then use the Center Leg Spacer Bar to determine the exact center of the rung and attach the Center Legs with glue and 2-1/2" screws. Attach the Center Rail to the Center Legs with the 8" carriage bolts and install 2-1/2" screws surrounding the carriage bolt on both sides.

Shown below are both Center Leg Spacers in place on the bed. Remove when done.

Optional Headers: Depending on your configuration and accessories ordered, you may also receive optional Headers as shown in the diagram. It is installed at the end of the rails between the inside of the legs. If it is a 3/4" thick use 1-5/8" screws if 1-1/2" thick use 2-1/2" screws.



Optional Safety Rails and Mattress / Pillow Stop


If your bed has a headboard shelves above the mattress, we will include Mattress / Pillow Stops that are attached to the inside of the head legs on either side of the center leg. Attach the headboard shelves following the normal shelf assembly procedure to the inside of the legs on either side of the center leg. The supports for the Pillow Stops have been pre-attached to the inside of the legs. Attach the Pillow Stops using 1-5/8" screws following the diagrams below. Attach the 2x6 Safety Rail Support to the Front Rail with 2-1/2" screws from behind the Front Rail. Drill (6) pilot holes from behind the front rail using the provided 1/8" drill bit. Install the Safety Rails with 1-5/8" screws to the inside of the legs.

The picture below shows a customized bed with the foot end of the bed having open ends L-Shaped Legs and no horizontal rungs. This allows better access to the open shelves built into the stairs from underneath the bed.




Optional Mattress / Pillow Stop (continued)

Pillow Stop Front View

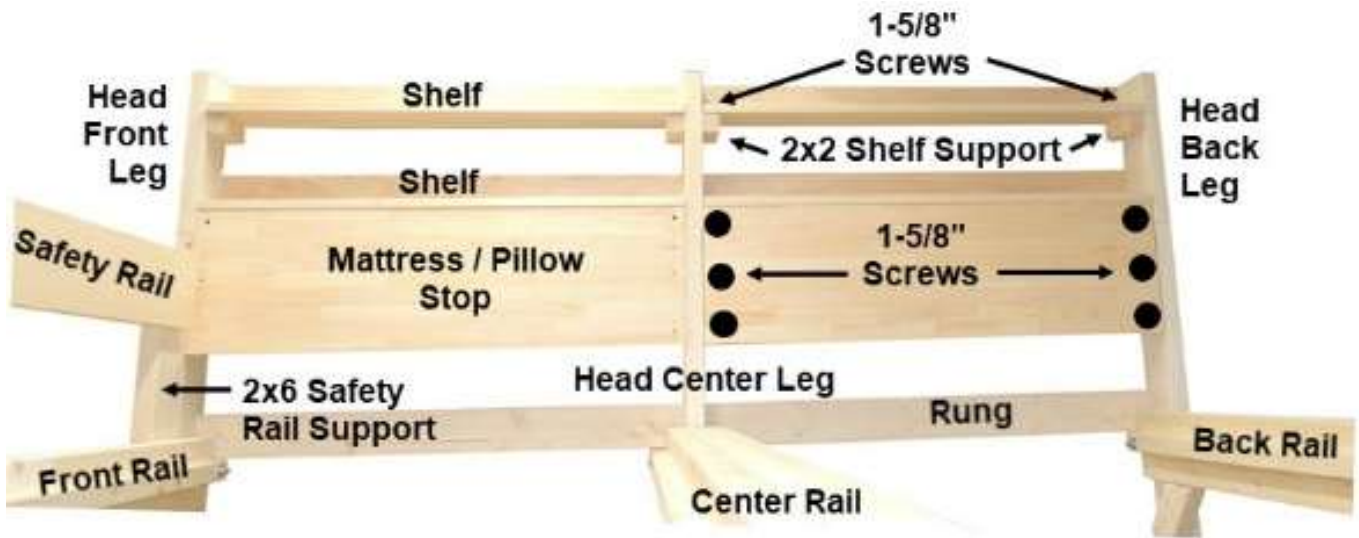

Pillow Stop Back View

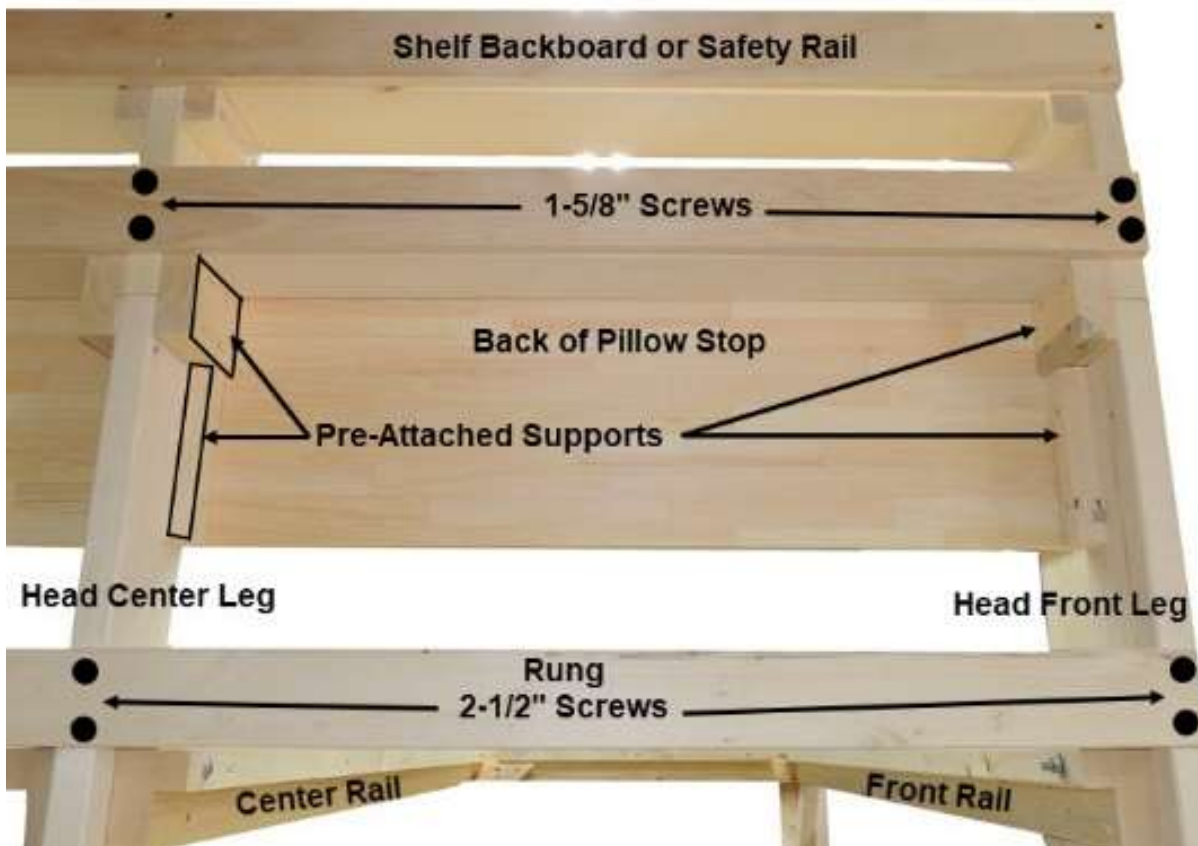

Optional Short Desk & Short Shelf

The Short Shelf and Short Desk are installed at the short end of the bed, either under the head or foot end of the bed.

The Short Shelf is installed following the standard bed shelf assembly instructions. If you ordered a standard 5-1/2" depth shelf, you will get (2) shelves that are attached to the inside of the legs. If you ordered a custom deeper shelf, it is one piece with a notch around the center leg post.

For the Short Desk, if we shipped your bed with FedEx, the desk comes in two pieces and is installed following the standard short desk assembly instructions with (2) desk braces. If we shipped your bed on a pallet the desk will be one piece with a notch around the center post and installed with (4) desk braces.

The picture below shows the one piece Short Shelf and Short Desk.

